
 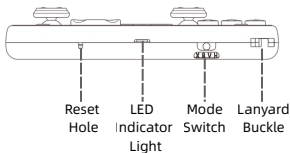



L06 Wireless Game Controller User Manual

L06 is a multi-functional game controller:

1. Supports switching between 5 controller modes
2. Compatible with retro gaming APP
3. Compatible with motion-sensing gaming APP

Button Function

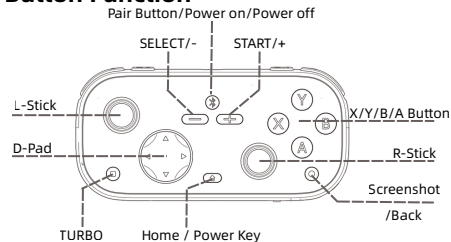

Specifications

Voltage: DC3.7V

Continuous Working: >20H

Battery Capacity: 350mAh



Transmission Distance: 10m

Standby Time: 30 Days


Connection Method

1. NS Mode


Tap Settings

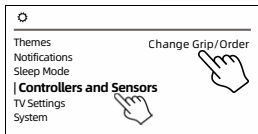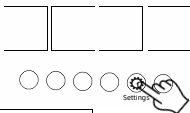


Tap controller and sensor, then go to Change grip/order.

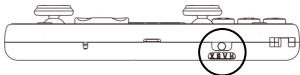

Slide switch to S position. First pairing: Press pair button to red light blinks. (Press Home to reconnect.)

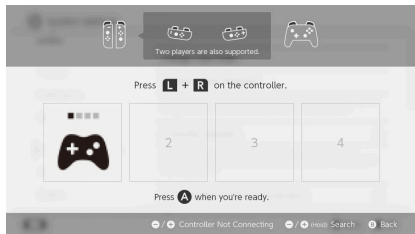

2. Xbox mode

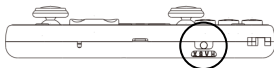

Slide to X position. First pairing: Press pair button to white light flashes. (Press Home to reconnect.)


Search Bluetooth

Xbox Wireless Controller



Turn on Bluetooth on phone/PC, search and select Xbox.

3. Pro Controller/Switch Mode

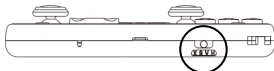

Slide to S position. First pairing: Press pair button to red light flashes. (Press Home to reconnect.)

Search Bluetooth

Pro Controller




Turn on Bluetooth on phone/PC, search and select Pro Controller.


4. Android Mapping Mode



Go to the app store, search for and download ShootingPlus V3

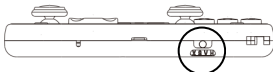


Slide to V position. First pairing: Press pair button till green light flashes.(Press Home to reconnect.)

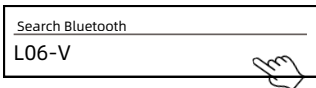


Turn on phone Bluetooth, search and select L06-V.

5. Android HID Mode

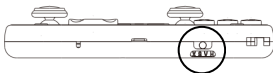

Slide to V position. In Power off, Press Home+A until purple light flashes. (Press Home to reconnect.)

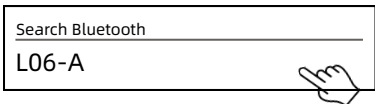


Turn on phone/PC Bluetooth, search and select L06-A.


6. Motion-sensing Mode



APP Download

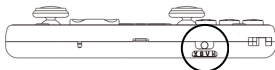

Slide to H position. First pairing: Press pair button to blue light flashes. (Press Home to reconnect.)

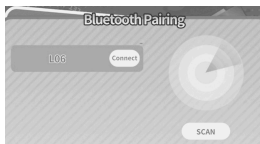

Open the downloaded app, tap scan to search Bluetooth and connect to L06.




Activate with code before first gameplay; code is on the **activation code page** of this manual.

7. Retro Games



Please scan the QR code to get games and tutorials.

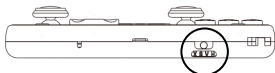

For retro games, switch the controller to Xbox or Switch/Pro Controller mode.

Android users Install the corresponding Android app directly. Enter the activation code on the **activation code page** if required.

iOS users follow tutorials to download the app and import games properly. Enter the activation code on the **activation code page** if required.

8. Wired Connection for PC

Connect the controller to a PC using a USB cable. Blue LED lights up under default Xinput mode with circular 3D joystick. Hold Home for 5 seconds to switch to Dinput mode, green LED turns on.

Mode Description

Mode	Xbox	Switch	Android V3	Motion-sensing Mode	Android HID
Mode Switch	X	S	V	H	V
Pairing Method	Short press PAIR to power on				Press HOME+A power on
Pairing Indicator light	White fast flash	Red fast flash	Green fast flash	Blue fast flash	Purple fast flash
Reconnection	Short press HOME				
Reconnect Indicator light	White slow flash	Red slow flash	Green slow flash	Blue slow flash	Purple slow flash
Pair succeeded	White steady on	Red steady on	Green steady on	Blue steady on	Purple steady on
Bluetooth Name	Xbox Wireless Controller	Pro Controller	L06-V	L06	L06-A
Vibration	Motor vibrates when pairing complete				

Setting function

1.Vibration adjust

Vibration level: 100%,70%,0% (Default:70%). Motor vibrate after adjustment done

[TURBO] + Left Joystick Up: Increase vibration level

[TURBO] + Left Joystick Down: Decrease vibration level

2. Turbo/Auto Turbo setting

Manual Turbo: TURBO + any action key for the first time.

Auto Turbo: Hold the same action key + press TURBO again.

Disable Turbo: Hold the same action key + press TURBO a third time .

Clear All Turbo Settings: Long press TURBO key for 3 seconds.

3. TURBO Speed Adjustment

Speed levels: 3 levels (5 times/sec, 12 times/sec, 20 times/sec)

[TURBO]+ Right Joystick Up: Increase turbo speed by one level.

[TURBO]+ Right Joystick press Down: Decrease turbo speed by one level.

Long press TURBO for 3s to clear TURBO settings, motor vibrates once when done.

Turbo settings auto clear after power off, reset required.

4. Stick Calibration

a、 Under power-off status, press SELECT+HOME to enter calibration mode with red & blue LEDs slow-flashing. Rotate 3D joysticks to full stroke for 2~3 circles.

b、 Press START to save and exit calibration. Red & blue LEDs flash fast for 3 seconds then the controller powers off automatically.

5. Gyro Calibration

a. Power off, lay controller flat, press START+HOME to power on → Red&Green slow flash.

b. Red&Green fast flash then auto power off after successful calibration.

6. Status Description

1. Charging in wireless mode

- LED slow flashes while charging.
- LED stays solid when fully charged.

2. Charge with power off: Green LED breathes during charging, steady green when full.

3. Sleep/Wake/Power-off

- Auto sleep after 10 mins idle in wireless mode.
- No sleep under wired connection.
- Auto power off in 1min if pairing fails.
- Auto power off in 1min if reconnection fails.

4. Low battery (<20%): Red LED slow flash.


5. Critical low power: Red LED quick flash 5 times then power off.

7. Issue resolved

a. TURBO + any button activates combo mode, Hold TURBO for 3s or power off to clear Turbo function

b. If abnormal issues occur, restart the device or press the reset hole button to restore.

Activation Code

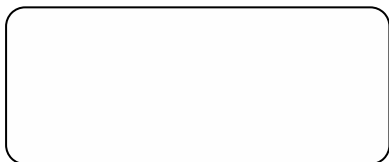

Unique genuine identifier, please
keep it safe.



Retro Game APP
(X Mode)



Motion-Sensing
Game APP (H Mode)

Scan the QR code to download the
game and get tutorials.

Website: www.lethigh.com

Download: www.lethigh.com/software